

Remove 7xscrews from door card, take out 2x 7mm bolts inside the door handle circled, (you have to prize the cover off)



Take off trim with window buttons unplug and remove



Take off door card remove foam thingy and speaker




The black (sound proof I think) foam stuff I cut out with Stanley, (a bit of duck tape will sort that out)



Before undoing anything you should support the window, wot I done is put strips of


tape over the door onto the window, (a little tip) put strips of paper over the paint work so the tape don't take the paint off when you remove it

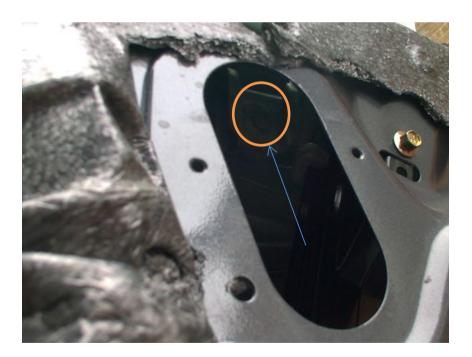


Disconnect the motor electric plug, then loosen the 2x10mm window clamp bolts this on right

As you look at door


(you cant see it very well in this pic, sorry)

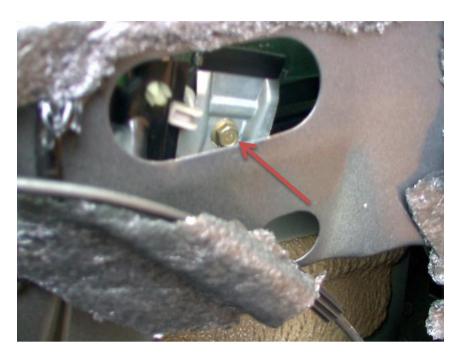

This is the window clamp on the left as you look at the door

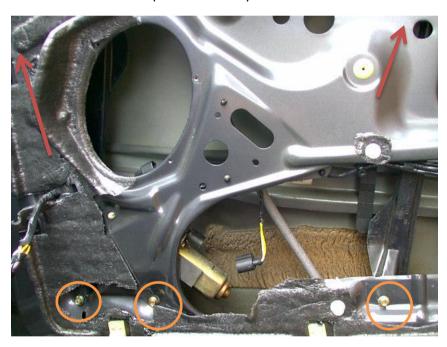

Undo 5x8mm bolts (3 circled 2 just out of shot) once there all out its just a matter of the best way to get it out, (said the actress to the bishop!!) try and remember which way it came out it may help when putting the new 1 in,

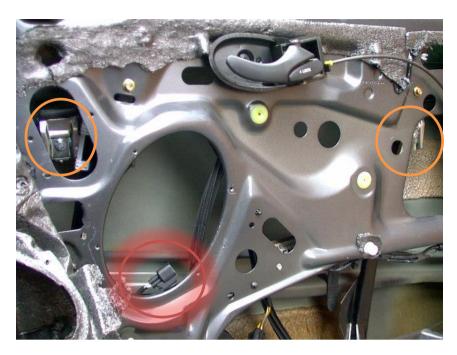

When the new window actuator is in all bolted up connect the motor and switches

back up and you should be able to move the window clamps down (much easier to get to)

loosen clamp bolts so clamps are open, now carefully take tape off windows and put window into clamps make sure its seated properly, tighten up bolts (don't overtighten or you may pop your window)



make sure it goes up and down ok ave a cuppa then you put everything back as it came off, (make sure you remember to connect up your speaker!!! Cos I forgot and had to take all door card off again, rather annoying)

Hope this helps