


Front Fog Lamp - Vehicles Built From: 11/2004**Removal**


1. Remove the fog lamp bezel.



2. Detach the fog lamp from the fog lamp bracket.

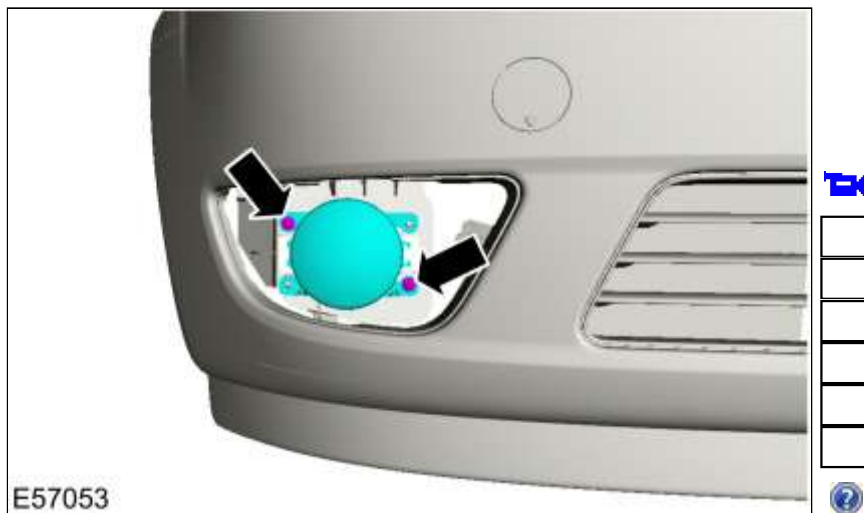

3. Remove the fog lamp assembly.
 - Pull off the fog lamp connector.

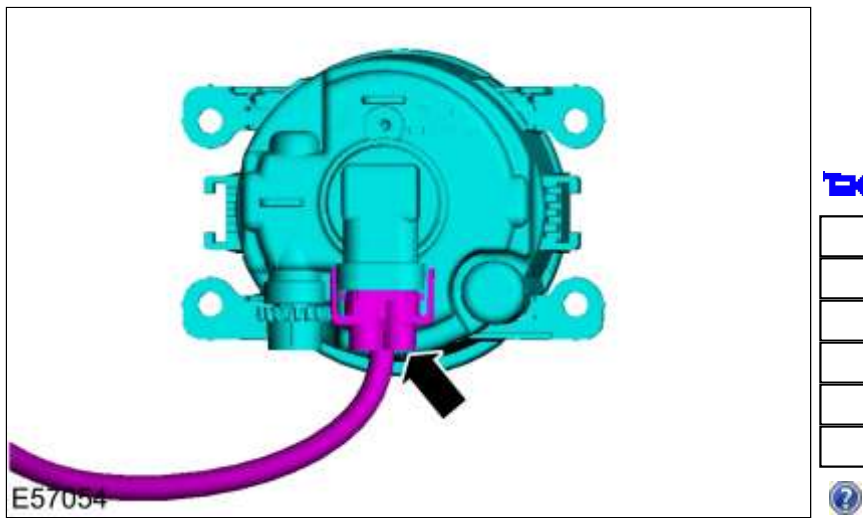

Installation

1. To assemble, reverse the disassembly procedure.
2. Adjust the fog lamp beam alignment.
For additional information, refer to: [Front Fog Lamp Adjustment](#) (417-01 Exterior Lighting, General Procedures).

© Copyright 2024, Ford Motor Company.
