


Blower Motor Resistor




Removal

1.

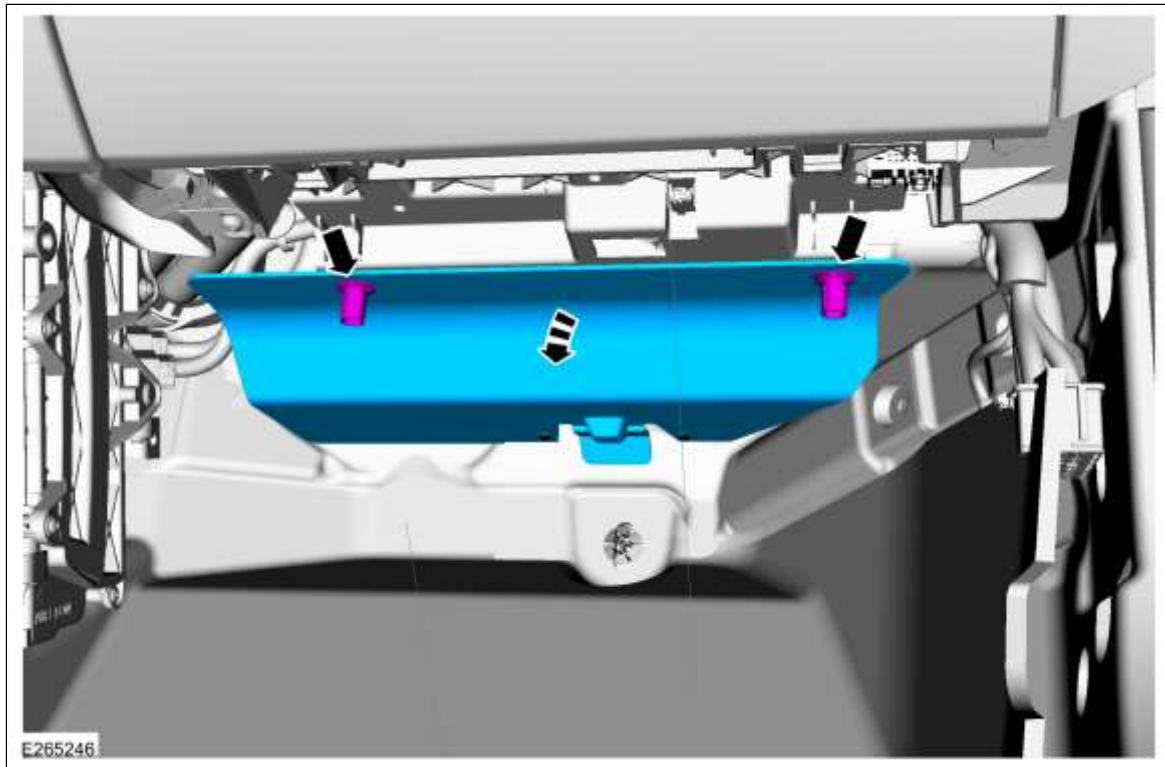

2.

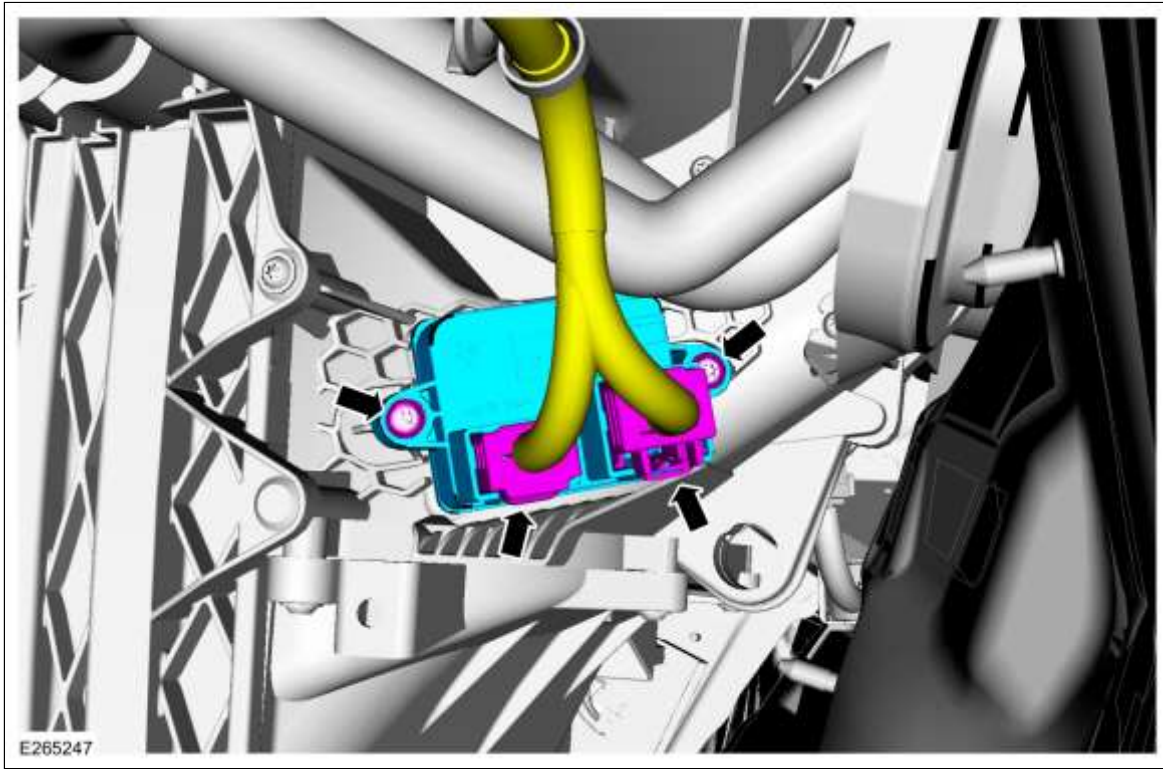

Installation

1. To install, reverse the removal procedure.

© Copyright 2024, Ford Motor Company.