

[«Fiesta 2002.25 Table of Contents»](#)

[«Group 3: Powertrain»](#)


[«Section 303-12: INTAKE AIR DISTRIBUTION AND FILTERING»](#)

[«REMOVAL AND INSTALLATION»](#)


---

## Air Cleaner — 1.3L Duratec-8V (Rocam) (231740)


### Removal

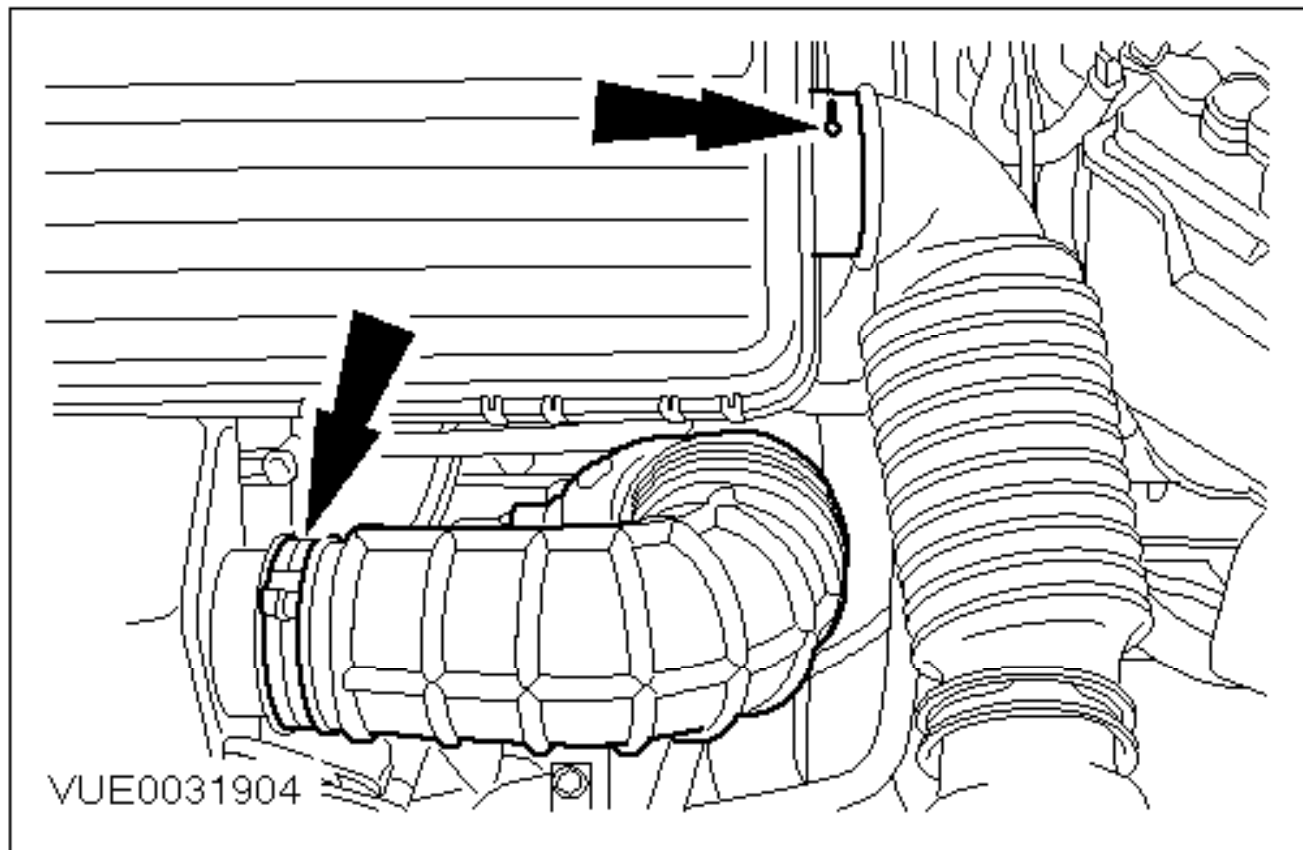

1. Disconnect the air cleaner intake and air outlet pipes from the air cleaner.

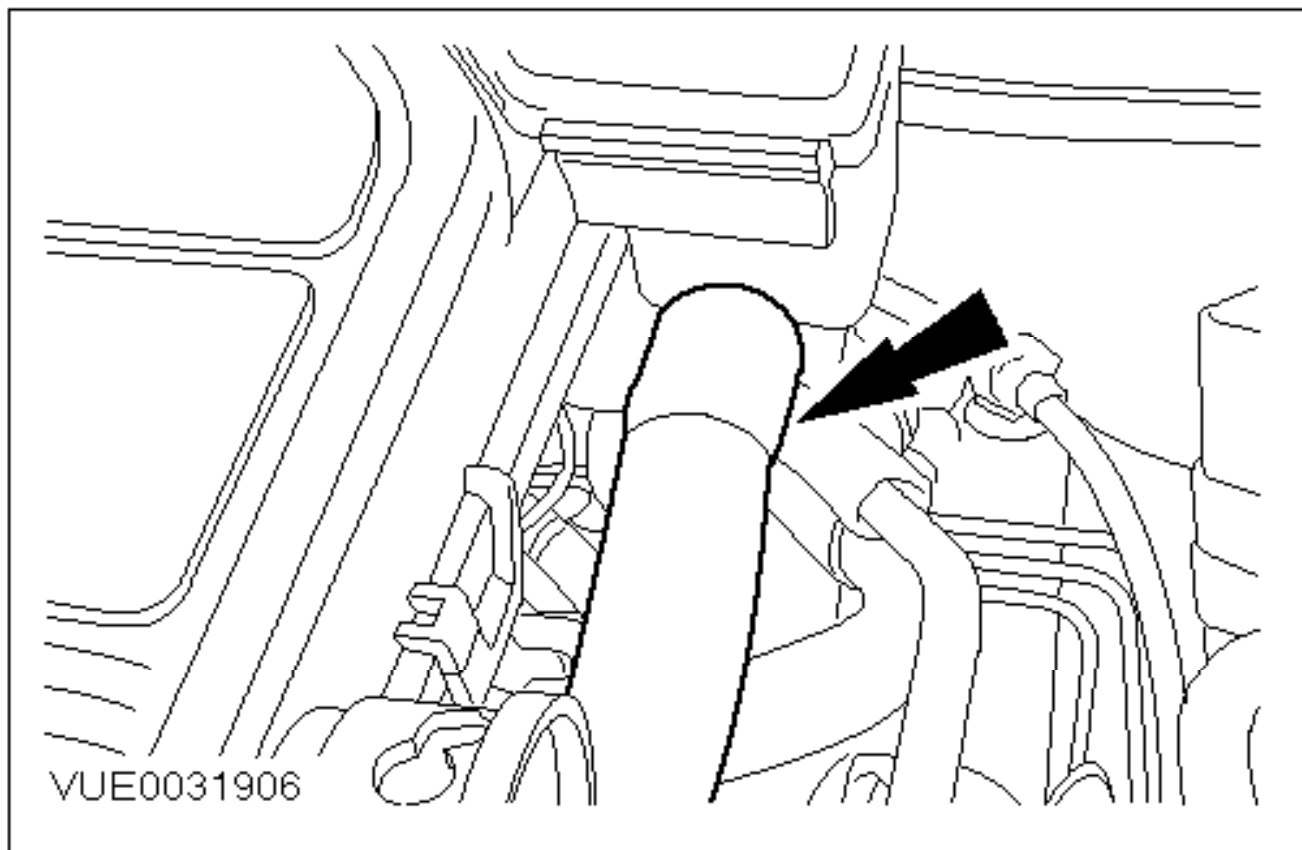

2. Disconnect the positive crankcase ventilation (PCV) hose from the air cleaner.

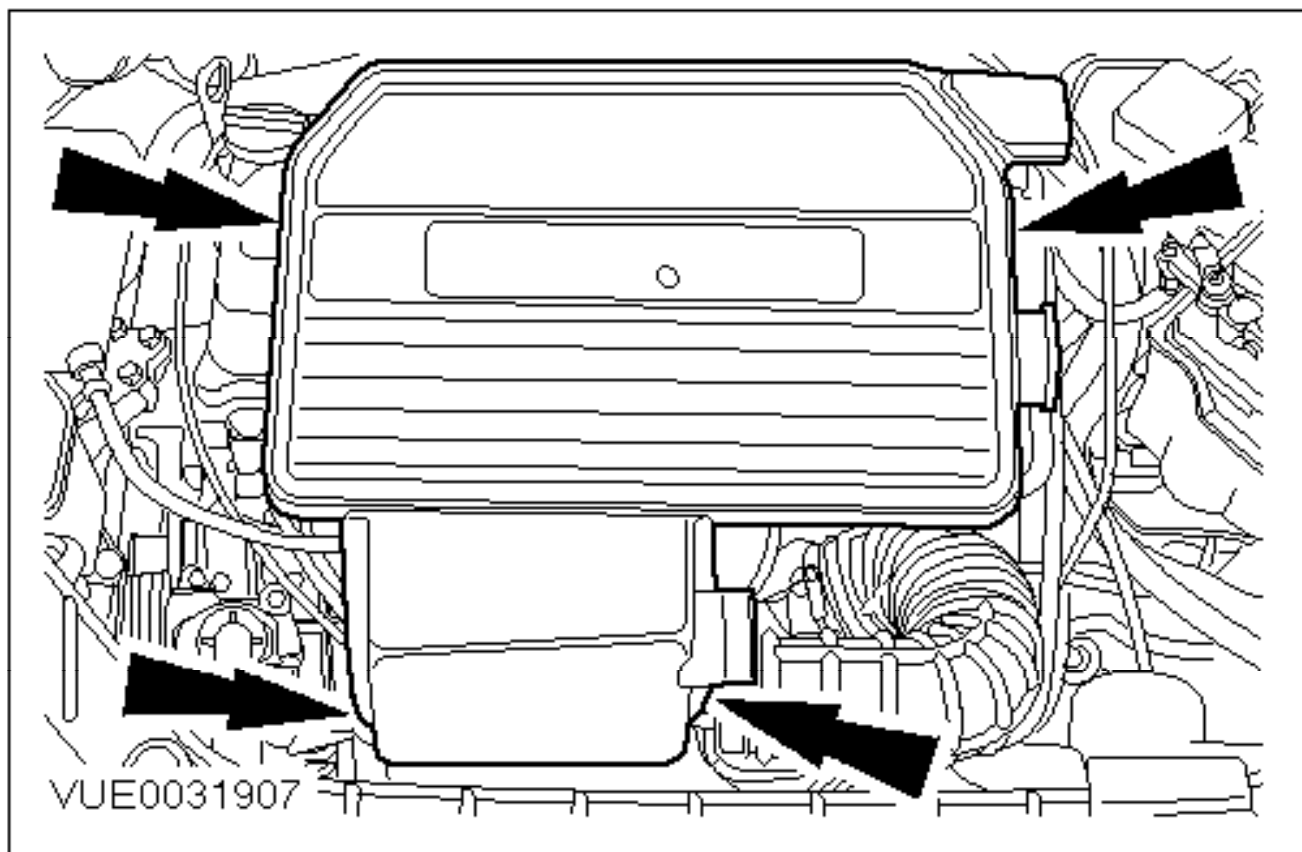

3. Remove the air cleaner.
- Lift the air cleaner up at the front and rear to remove.

## Installation

1. **Note:**  
Locate the front mounting pegs into the front isolators and then locate the rear isolators onto the rear mounting pegs and push down.

To install, reverse the removal procedure.

---