




FORD Fiesta 1.4 16V (Duratec FXJA) 2002 until 2008

Fuses and Relays: Fuse and relay box in passenger compartment

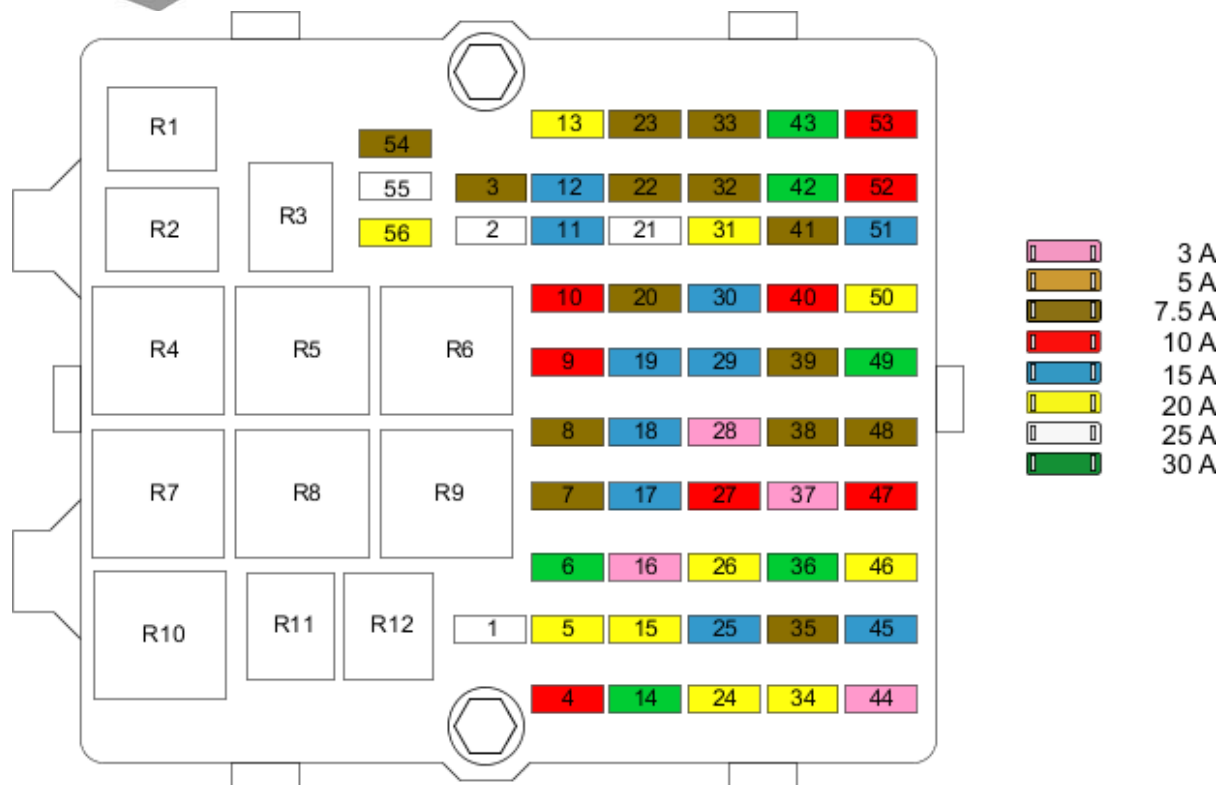



FORD Fiesta 1.4 16V (Duratec FXJA) 2002 until 2008

Fuses and Relays: Fuse and relay box in passenger compartment

Description

Fuse 1 - 0.0 A	Not used
Fuse 2 - 0.0 A	Not used
Fuse 3 - 7.5 A	Exterior lights
Fuse 4 - 10.0 A	Engine management
Fuse 5 - 20.0 A	ESP
Fuse 6 - 30.0 A	ESP
Fuse 7 - 7.5 A	Transmission
Fuse 8 - 7.5 A	Mirrors
Fuse 9 - 10.0 A	Exterior lights
Fuse 10 - 10.0 A	Exterior lights
Fuse 11 - 15.0 A	Daylight running system
Fuse 12 - 15.0 A	Security system
Fuse 13 - 20.0 A	Engine management
Fuse 14 - 30.0 A	Ignition system
Fuse 15 - 20.0 A	Ignition
Fuse 16 - 3.0 A	Engine management
Fuse 17 - 15.0 A	Exterior light(s)
Fuse 18 - 15.0 A	Communication system
Fuse 19 - 15.0 A	Daylight running system
Fuse 20 - 7.5 A	Multifunction control unit
Fuse 21 - 0.0 A	Not used
Fuse 22 - 7.5 A	Exterior lights
Fuse 23 - 7.5 A	Exterior lights
Fuse 24 - 20.0 A	Multifunction control unit
Fuse 25 - 15.0 A	Multifunction control unit
Fuse 26 - 20.0 A	Multifunction control unit
Fuse 27 - 10.0 A	Multifunction control unit
Fuse 28 - 3.0 A	Alternator
Fuse 29 - 15.0 A	Instrument panel
Fuse 30 - 15.0 A	Automatic transmission
Fuse 31 - 20.0 A	Exterior lights
Fuse 32 - 7.5 A	Mirrors
Fuse 33 - 7.5 A	Video system
Fuse 34 - 20.0 A	Sliding roof
Fuse 35 - 7.5 A	Seats
Fuse 36 - 30.0 A	Instrument lighting
Fuse 37 - 3.0 A	ESP
Fuse 38 - 7.5 A	Multifunction module
Fuse 39 - 7.5 A	Airbag(s)
Fuse 40 - 10.0 A	Exterior lights
Fuse 41 - 7.5 A	Transmission
Fuse 42 - 30.0 A	Windows



FORD Fiesta 1.4 16V (Duratec FXJA) 2002 until 2008

Fuses and Relays: Fuse and relay box in passenger compartment

Fuse 43 - 30.0 A	Windows
Fuse 44 - 3.0 A	Video system
Fuse 45 - 15.0 A	Exterior lights
Fuse 46 - 20.0 A	Multifunction control unit
Fuse 47 - 10.0 A	Multifunction control unit
Fuse 48 - 7.5 A	Exterior lights
Fuse 49 - 30.0 A	Heating and ventilation
Fuse 50 - 20.0 A	Exterior lights
Fuse 51 - 15.0 A	Instrument panel
Fuse 52 - 10.0 A	Exterior lights
Fuse 53 - 10.0 A	Exterior lights
Fuse 54 - 7.5 A	Exterior lights
Fuse 55 - 0.0 A	Not used
Fuse 56 - 20.0 A	Exterior lights
Relay R1 - 0.0 A	Main beam
Relay R2 - 0.0 A	Dipped beam
Relay R3 - 0.0 A	Daylight running system
Relay R4 - 0.0 A	Ignition
Relay R5 - 0.0 A	Cooling fan
Relay R6 - 0.0 A	No information available
Relay R7 - 0.0 A	Heated windscreen
Relay R8 - 0.0 A	Immobiliser
Relay R9 - 0.0 A	PCM
Relay R10 - 0.0 A	No information available
Relay R11 - 0.0 A	Fuel pump
Relay R12 - 0.0 A	No information available