



700-01-00-001, Fuse and Relay Information, Central Junction Box (CJB), RHD with remote control central locking, before 02/2001

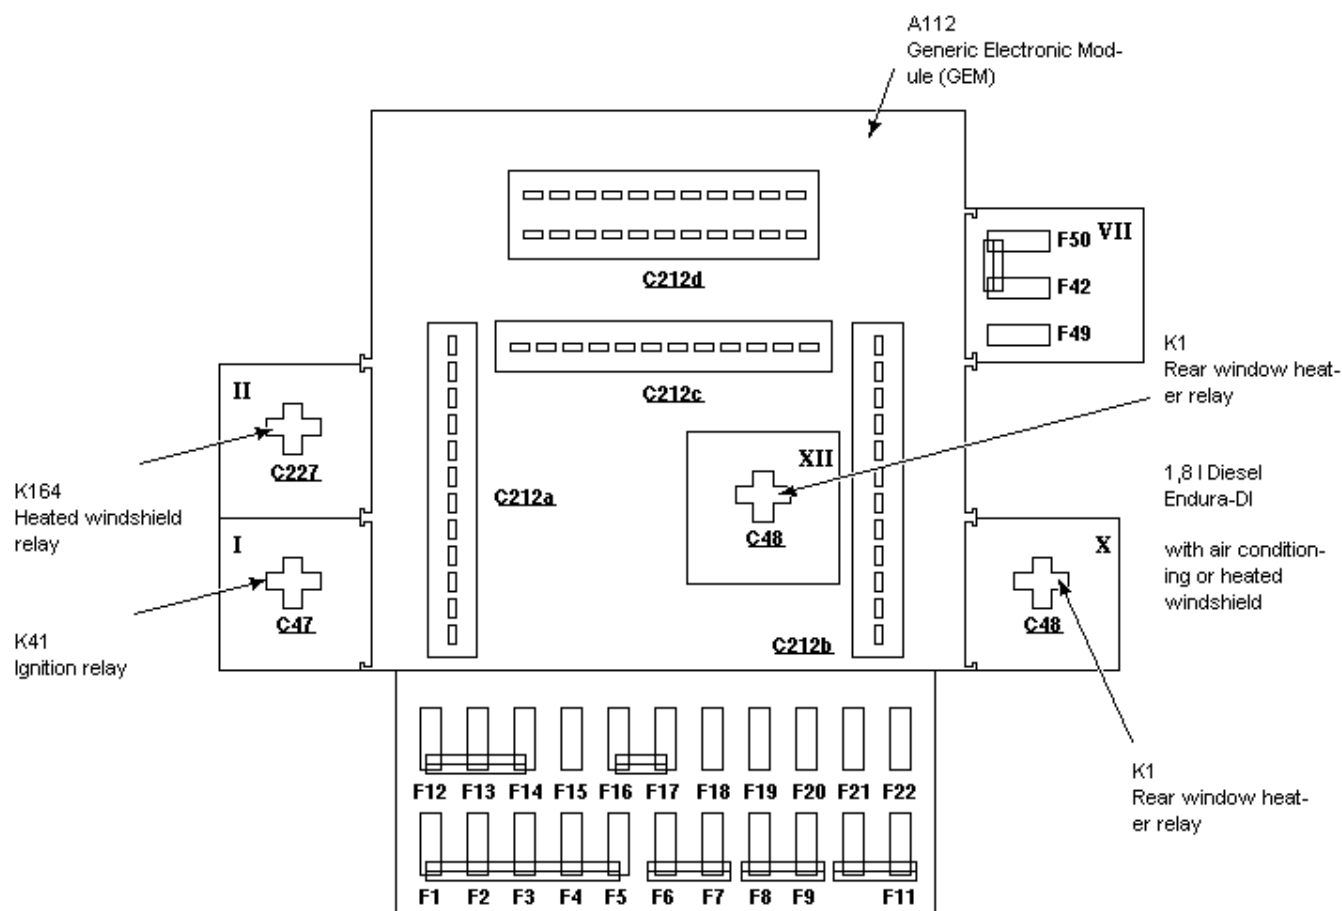


700-01-00-002, Fuse and Relay Information, Central Junction Box (CJB), RHD with remote control central locking, as of 02/2001

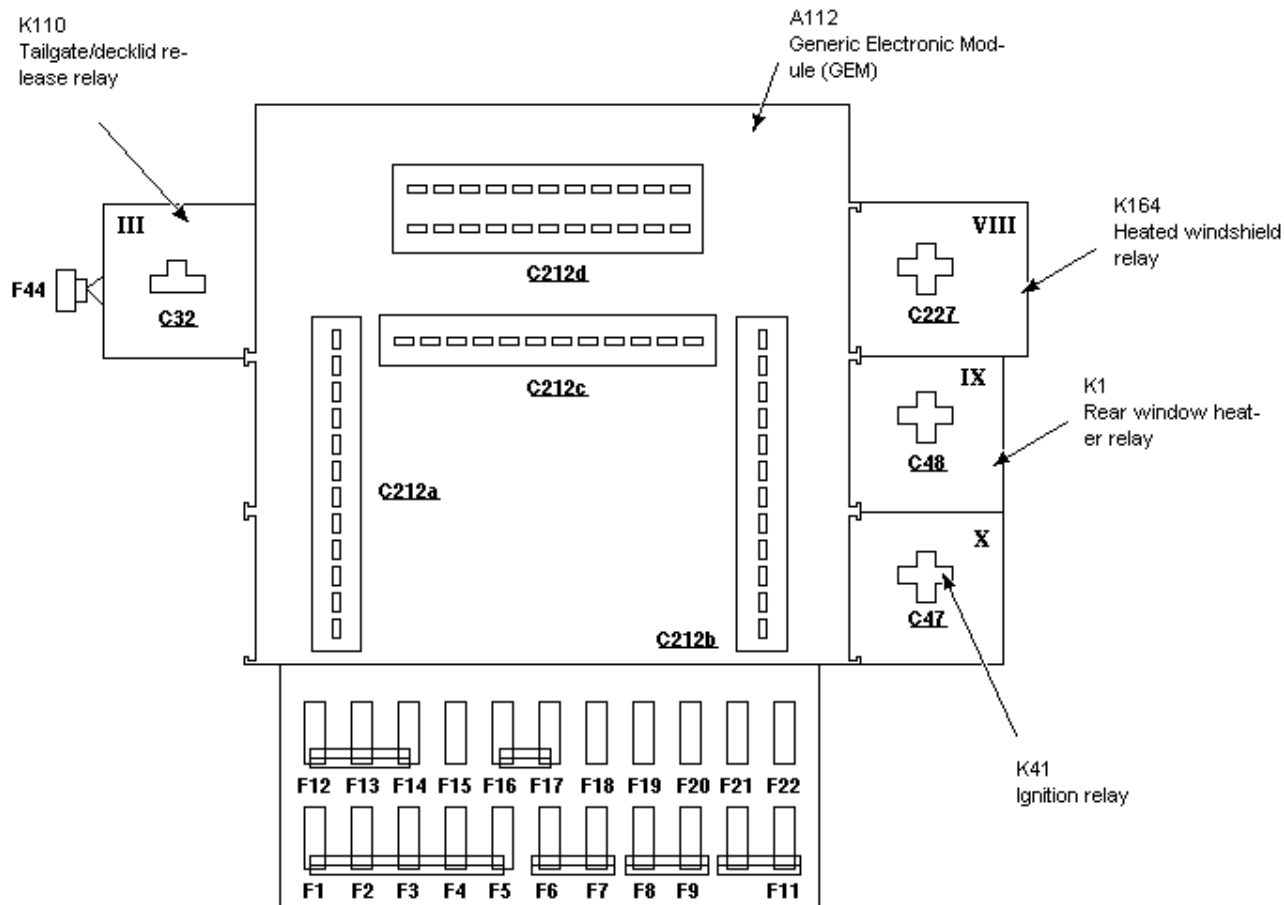


700-01-00-003, Fuse and Relay Information, Central Junction Box (CJB), RHD without remote control central locking, before 02/2001

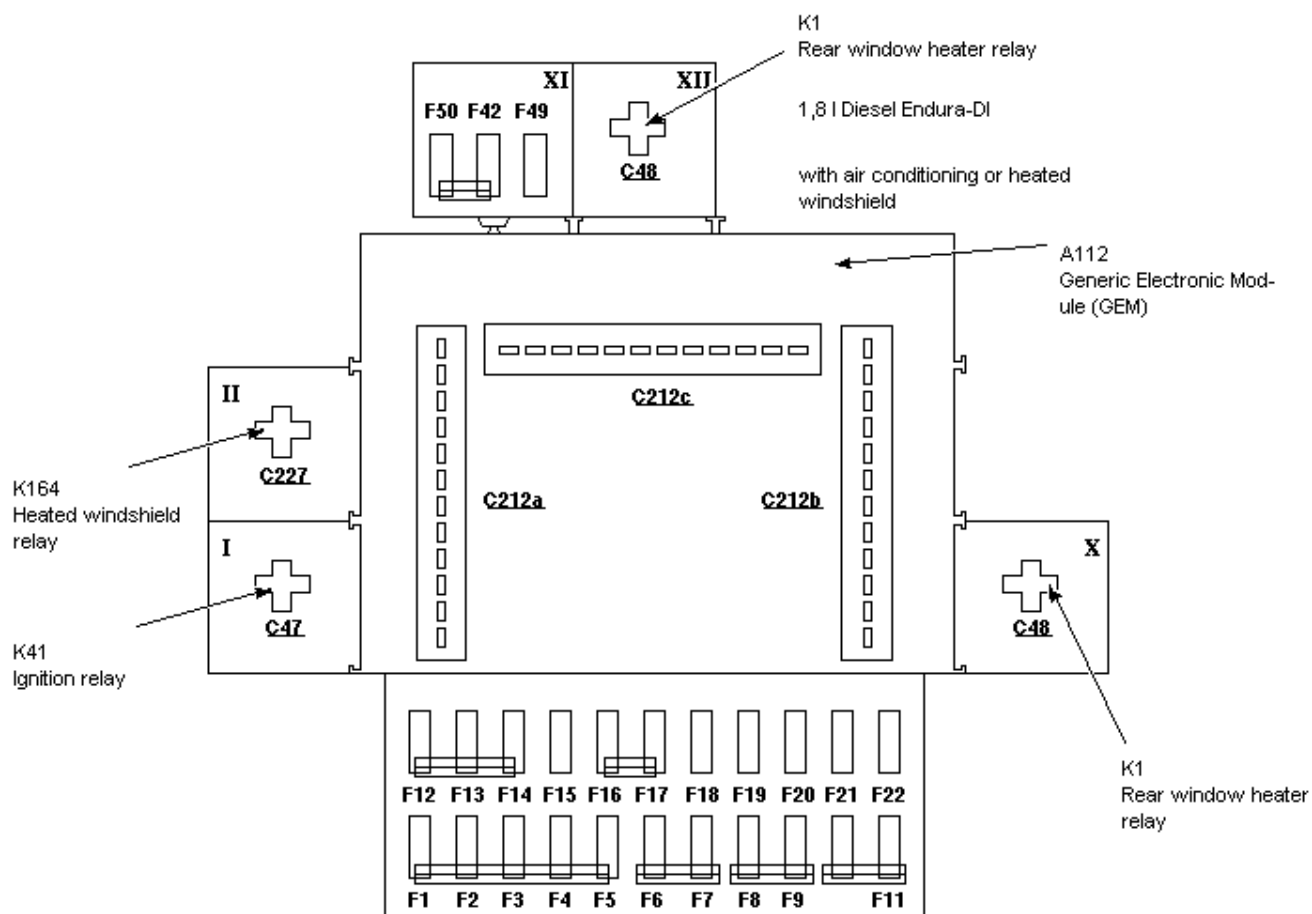



700-01-00-004, Fuse and Relay Information, Central Junction Box (CJB), RHD without remote control central locking, as of 02/2001

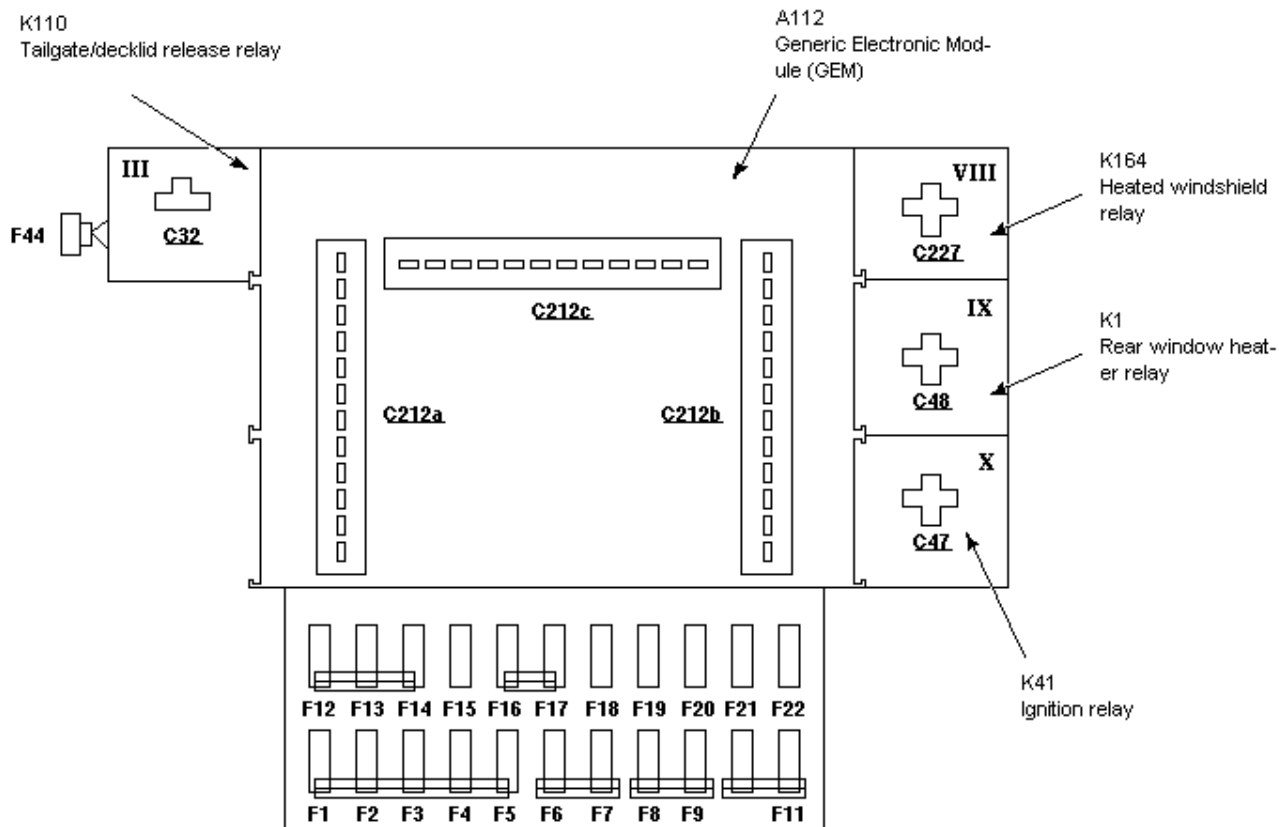


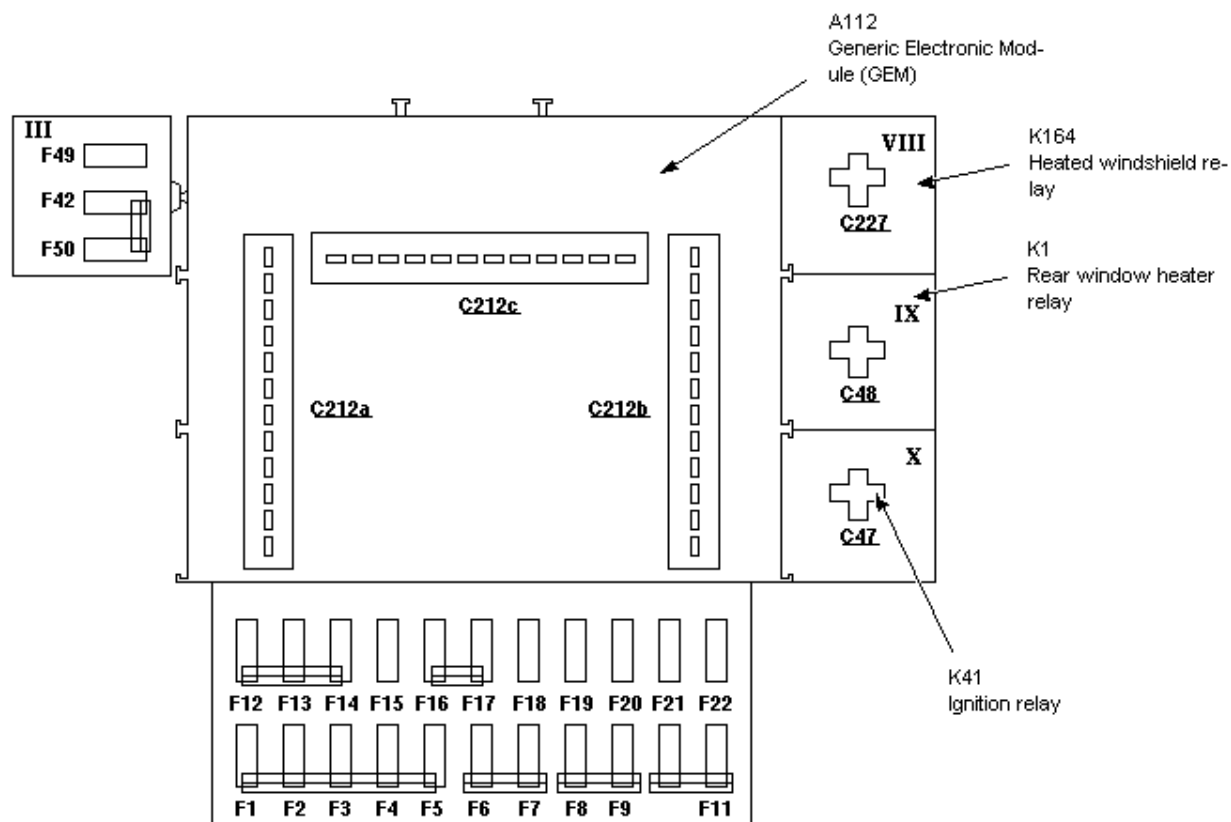



700-01-00-006, Fuse and Relay Information, Central Junction Box (CJB), LHD with remote control central locking, before 02/2001

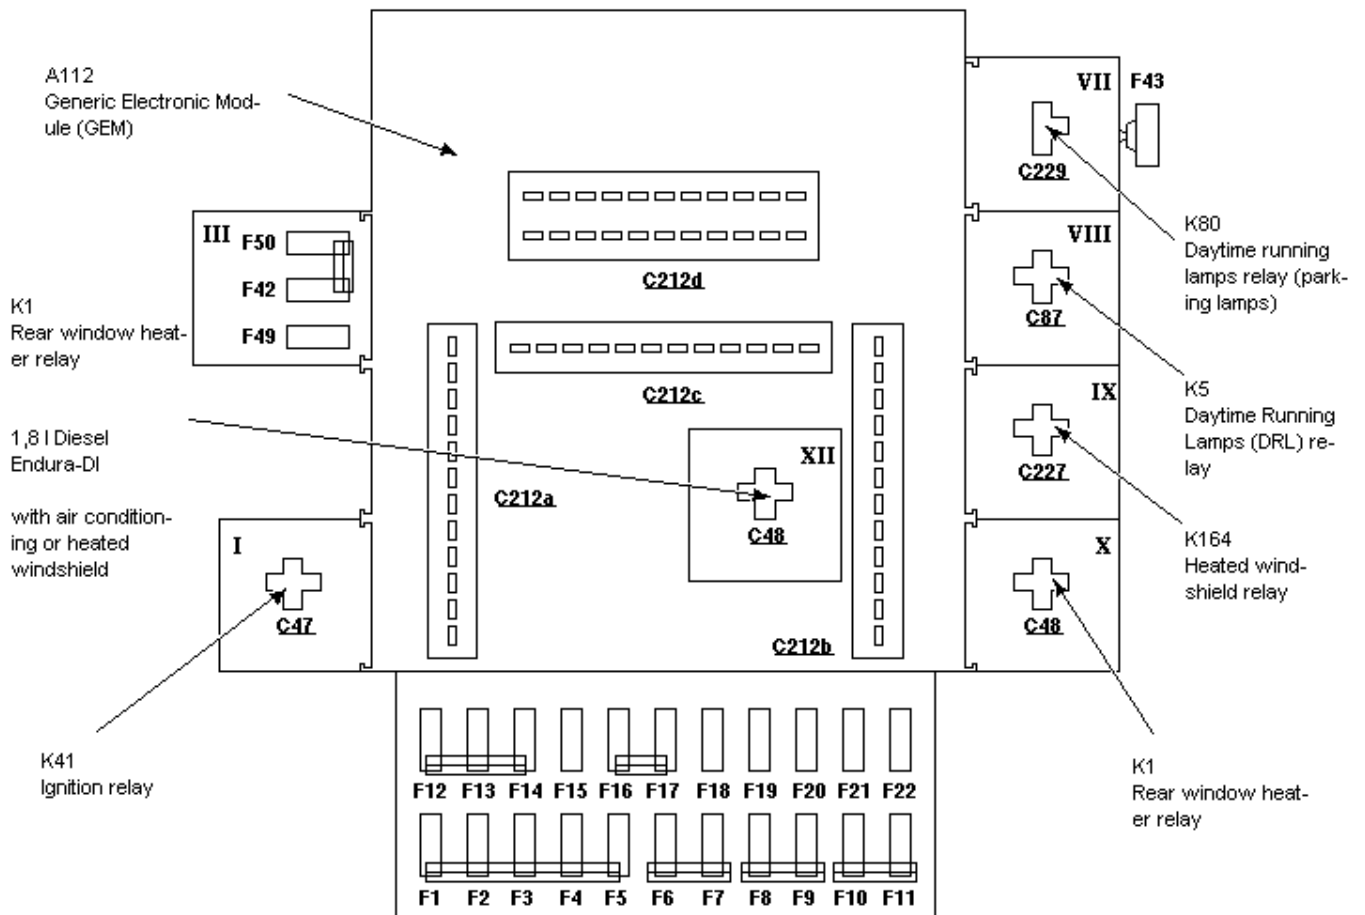

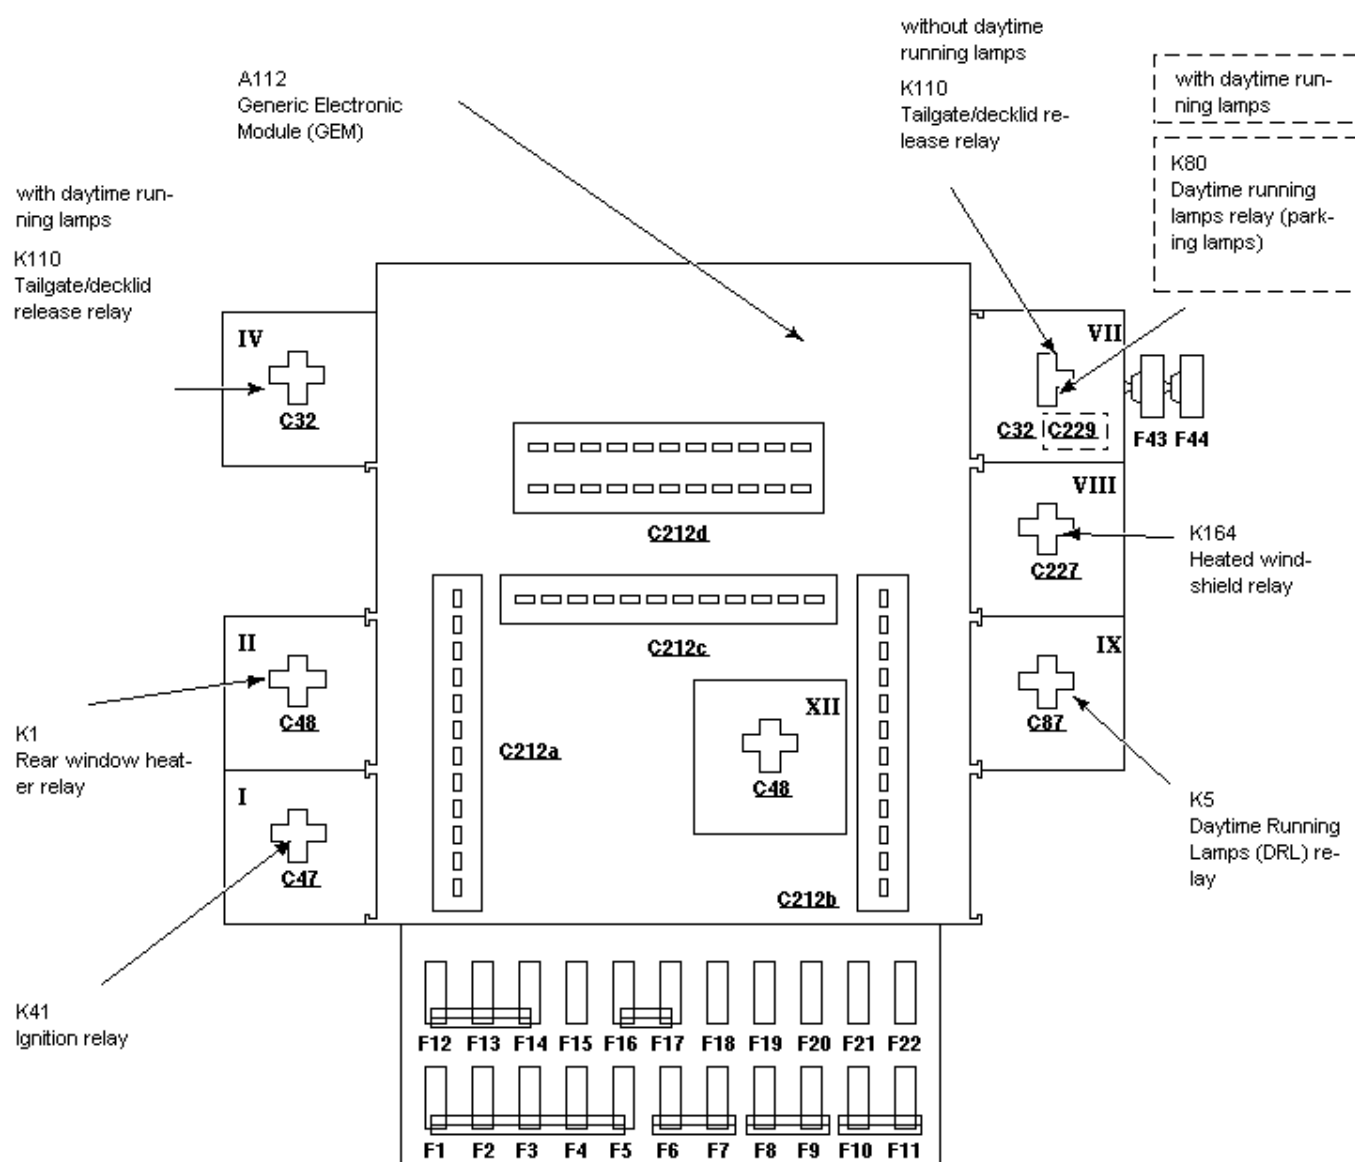


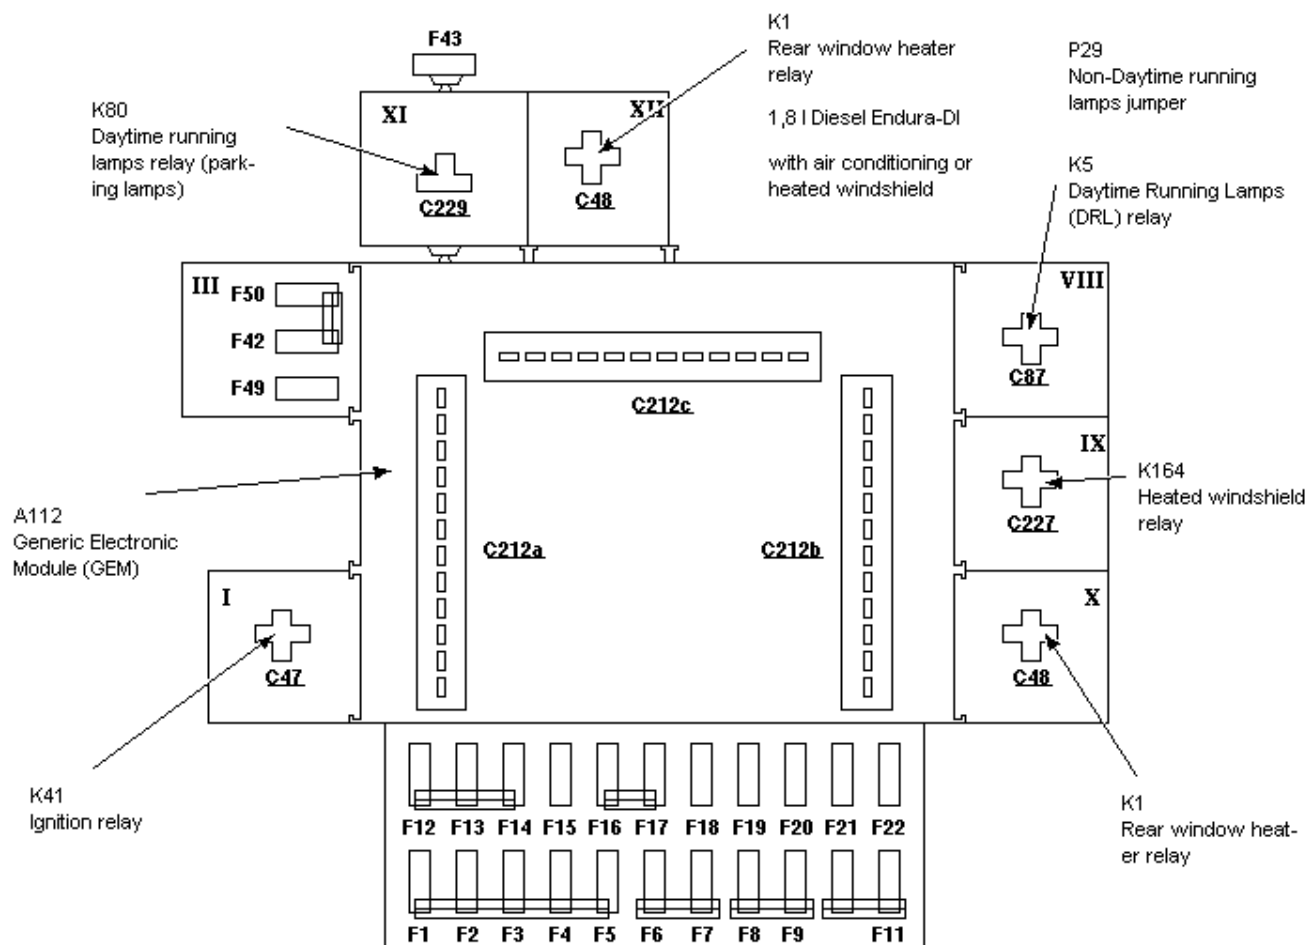

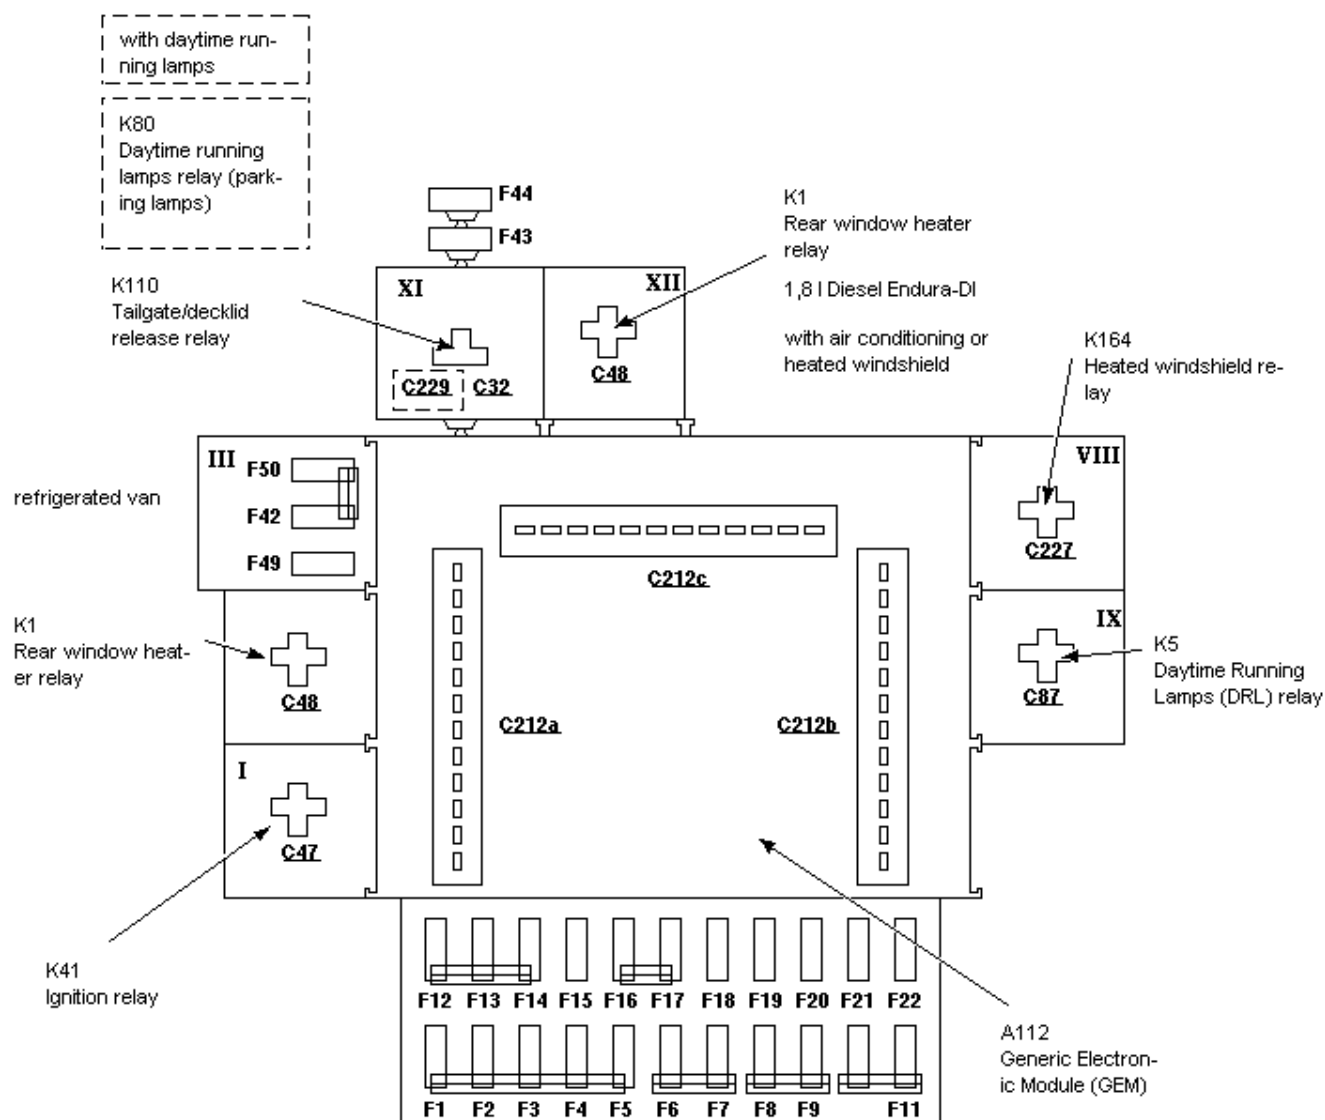

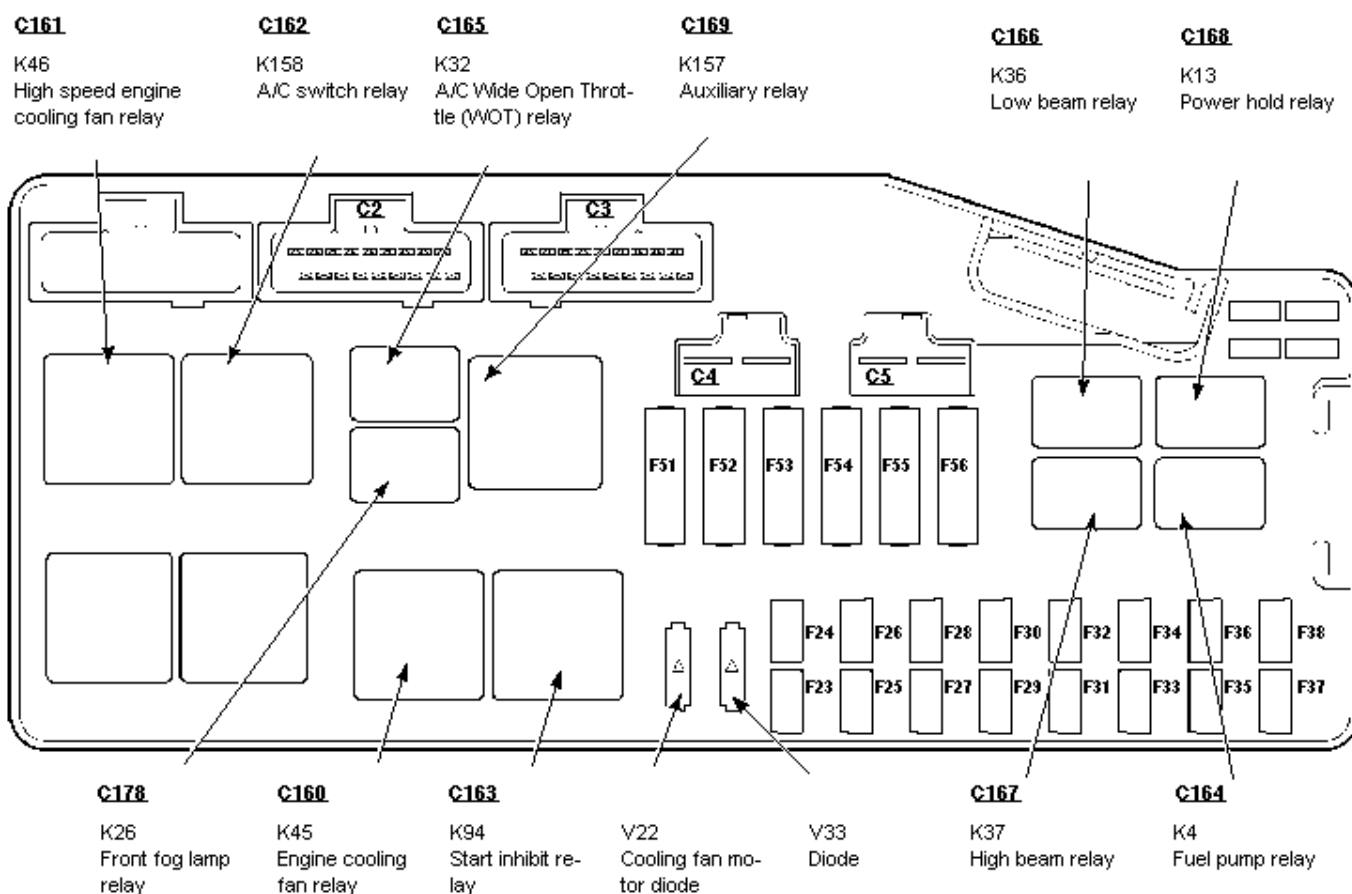

700-01-00-011, Fuse and Relay Information, Diesel engines Battery Junction Box (BJB)

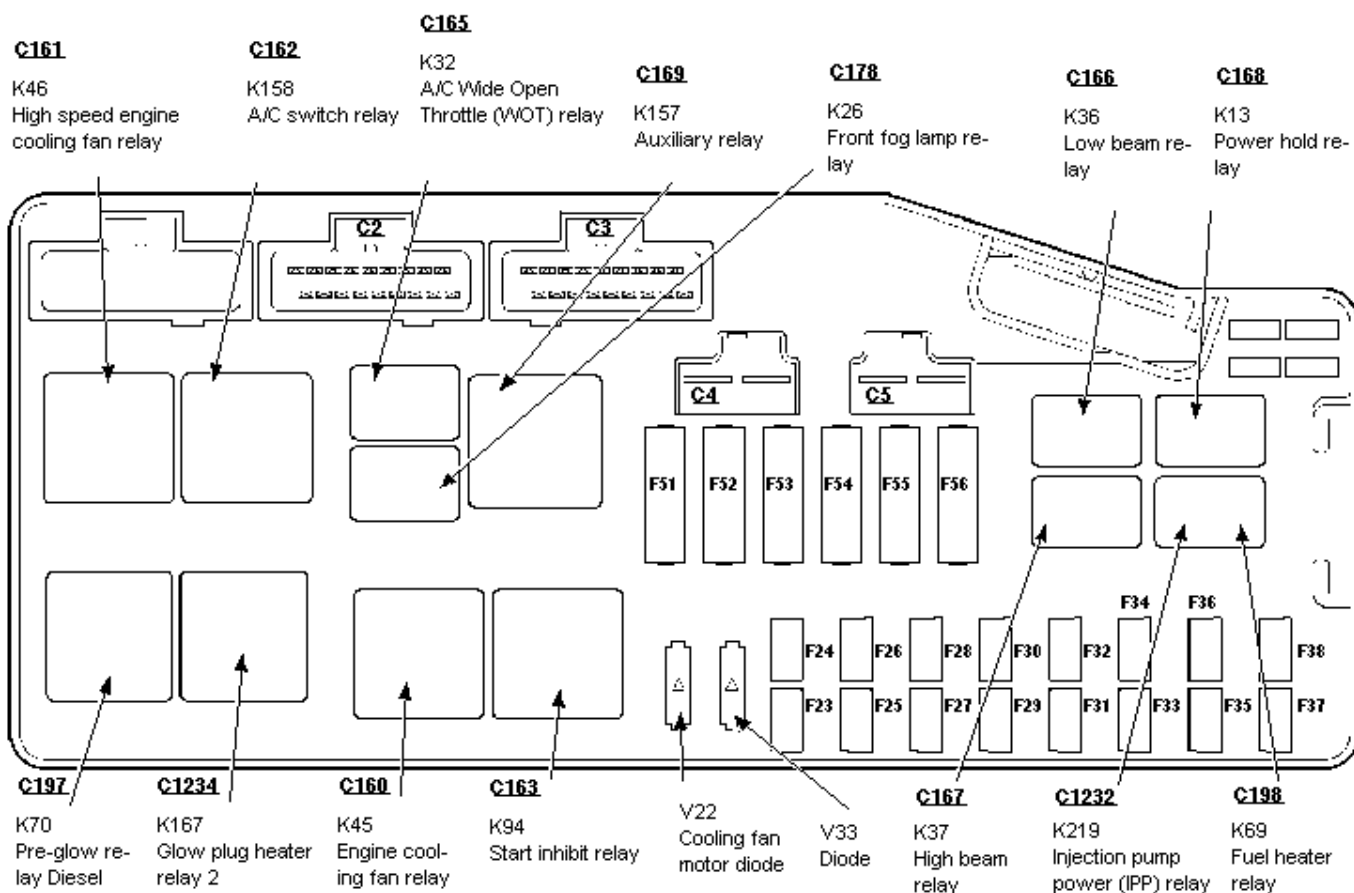

700-01-00-012, Fuse and Relay Information, Central Junction Box (CJB)

Group	Description	Fuse number										
		1	2	3	4	5	6	7	8	9	10	11
		15A	7.5A	10A	20A	15A	7.5A	7.5A	15A	25A	15A	30A
206-09A-00	Anti-Lock Control											
211-00-00	Steering System - General Information											
303-03-00	Engine Cooling											
303-04A-00	Fuel Charging and Controls - 1.3 l Eudra-E											
303-04B-00	Fuel Charging and Controls - ZETEC-SE engines											
303-04D-00	Fuel Charging and Controls - 1.8 l Diesel Eudra-DE											
303-04E-00	Fuel Charging and Controls - 1.8 l Diesel Eudra-DI											
303-06-00	Starting System											
303-07A-00	Engine Ignition - 1.3 l Eudra-E											
303-07B-00	Engine Ignition - ZETEC-SE engines											
303-07D-00	Glow Plug System - 1.8 l Diesel Eudra-DE											
303-07E-00	Glow Plug System - 1.8 l Diesel Eudra-DI											
303-14A-00	Electronic Engine Controls - 1.3 l Eudra-E											
303-14B-00	Electronic Engine Controls - ZETEC-SE engines											
303-14D-00	Electronic Engine Controls - 1.8 l Diesel Eudra-DE											
303-14E-00	Electronic Engine Controls - 1.8 l Diesel Eudra-DI											
412-02-00	Heating and Ventilation		●				●					
412-03A-00	Air Conditioning		●				●					
412-03B-00	Auxiliary Climate Control		●				●					
413-00-00	Instrument Cluster and Panel Illumination						●	●		●	●	
413-01-00	Instrument Cluster		●				●					
413-06-00	Horn					●						
413-07-00	Clock		●									
413-13-00	Parking Aid											
414-00-00	Charging System - General Information											
415-01-00	Audio Unit						●					
415-03-00	Speakers											
		1	2	3	4	5	6	7	8	9	10	11
		15A	7.5A	10A	20A	15A	7.5A	7.5A	15A	25A	15A	30A

700-01-00-013, Fuse and Relay Information, Central Junction Box (CJB)

Flussnummer																	
12	13	14	15	16	17	18	19	20	21	22	41	42	43	44	50		
200	150	100	750	300	150	150	750	200	150	100			100	150		Group	
	●															206-09A-00	
																211-00-00	
																303-03-00	
						●										303-04A-00	
						●										303-04B-00	
●																303-04D-00	
																303-04E-00	
																303-06-00	
						●										303-07A-00	
						●										303-07B-00	
●																303-07D-00	
●																303-07E-00	
						●										303-14A-00	
●						●										303-14B-00	
●						●										303-14D-00	
●						●										303-14E-00	
●				●												412-02-00	
●				●												412-03A-00	
●												●				412-03B-00	
																413-00-00	
●							●	●								413-01-00	
																413-06-00	
							●									413-07-00	
●																413-13-00	
●																414-00-00	
							●			●						415-01-00	
																415-03-00	
12	13	14	15	16	17	18	19	20	21	22	41	42	43	44	50		
200	150	100	750	300	150	150	750	200	150	100			100	150			

[illegible]

700-01-00-015, Fuse and Relay Information, Central Junction Box (CJB)

Group	Description	Fuse number											
		23	24	25	26	27	28	29	30	31	32	33	
		10A	30A	10A	30A	10A	3A	10A	15A	**	**	20A	3A
206-09A-00	Anti-Lock Control		●		●		●						
211-00-00	Steering System - General Information								●				
303-03-00	Engine Cooling				●				●				
303-04A-00	Fuel Charging and Controls - 1,3 l Emdra-E								●				
303-04B-00	Fuel Charging and Controls - ZETEC-SE engines								●	●			
303-04D-00	Fuel Charging and Controls - 1,8 l Diesel Emdra-DE												
303-04E-00	Fuel Charging and Controls - 1,8 l Diesel Emdra-DI								●	●			
303-06-00	Starting System												
303-07A-00	Engine Ignition - 1,3 l Emdra-E												
303-07B-00	Engine Ignition - ZETEC-SE engines									●			
303-07D-00	Glow Plug System - 1,8 l Diesel Emdra-DE								●				
303-07E-00	Glow Plug System - 1,8 l Diesel Emdra-DI								●				
303-14A-00	Electronic Engine Controls - 1,3 l Emdra-E								●	●		●	
303-14B-00	Electronic Engine Controls - ZETEC-SE engines								●	●		●	
303-14D-00	Electronic Engine Controls - 1,8 l Diesel Emdra-DE								●			●	
303-14E-00	Electronic Engine Controls - 1,8 l Diesel Emdra-DI								●	●		●	
412-02-00	Heating and Ventilation												
412-03A-00	Air Conditioning								●		●		
412-03B-00	Auxiliary Climate Control								●		●		
413-00-00	Instrument Cluster and Panel Illumination												
413-01-00	Instrument Cluster								●				
413-06-00	Horn												
413-07-00	Clock												
413-13-00	Parking Aid												
414-00-00	Charging System - General Information												
415-01-00	Audio Unit												
415-03-00	Speakers												
		23	24	25	26	27	28	29	30	31	32	33	
		10A	30A	10A	30A	10A	3A	10A	15A	**	**	20A	3A

** 10A: all others

20A: 1,25 l ZETEC-SE

30A: 1,8 l Diesel Emdra-DI

700-01-00-017, Fuse and Relay Information, Battery Junction Box (BJB)

Fuse number														
34	35	36	37	38	51	52	53	54	55	56	57	100 *	101 *	102 *
300		100 150	30	300	600	400	600	600	600	600	600	200	7.50	200
														Group
														206-09A-00
											●			211-00-00
					●	●								303-03-00
														303-04A-00
														303-04B-00
		●												303-04D-00
														303-04E-00
					●									303-06-00
														303-07A-00
														303-07B-00
					●									303-07D-00
					●									303-07E-00
		●												303-14A-00
●		●			●									303-14B-00
●														303-14D-00
				●				●						303-14E-00
														412-02-00
					●									412-03A-00
					●	●								412-03B-00
									●					413-00-00
														413-01-00
														413-06-00
														413-07-00
														413-13-00
														414-00-00
														415-01-00
														415-03-00
34	35	36	37	38	51	52	53	54	55	56	57	100 *	101 *	102 *
300		100 150	30	300	600	400	600	600	600	600	600	200	7.50	200

* Auxiliary fuses

[illegible]

$\approx 10\%$: all others

20A: 1.25 | ZETEC-SE

30A: 18 | Diesel | Endura-D |

700-01-00-019, Fuse and Relay Information, Battery Junction Box (BJB)

[illegible]
