

When an error occurs, your warning light may flash a code, made up of a flash sequence, a pause, then another sequence. Count the flashes in each sequence and use the flash code to find the associated cause below. For example, four flashes then nine will be a flash code of 49.

1.1 No communication with the module

1.2 DTC B1231: Longitudinal acceleration threshold exceeded. Lamp flash code: 13

1.3 DTC B1317: Battery voltage high. Lamp flash code: continuous

1.4 DTC B1318: Battery voltage low. Lamp flash code: continuous

1.5 DTC B1342: Air bag control module is defective. Lamp flash code: 12

1.6 DTC B1869: Air bag warning indicator open circuit or short to ground. Lamp flash code: continuous

1.7 DTC B1870: Air bag warning indicator short to battery. Lamp flash code: continuous

1.8 DTC 1884: Passenger air bag deactivation indicator inoperative. Lamp flash code: 18

1.9 DTC B1890: Passenger air bag deactivation indicator short to battery. Lamp flash code: 18

1.10 DTC B1891: Air bag tone warning indicator short to battery. Lamp flash code: 53

1.11 DTC B1892: Air bag tone warning indicator circuit fault. Lamp flash code: 53

1.12 DTC B1921: Air bag diagnostic monitor ground circuit open. Lamp flash code: 14

1.13 DTC B2290 Error value 27: Occupant Classification System module fault. Lamp flash code: 16

1.14 DTC B2290 Error value 26: Occupant Classification System communications fault. Lamp flash code: 16

1.15 DTC B2290 Error value 25: Occupant Classification System calibration fault. Lamp flash code: 16

1.16 DTC B2290 Error value 24: Occupant Classification System sensing element fault. Lamp flash code: 16

1.17 DTC B2292 Error value 31: Driver safety belt pretensioner circuit low resistance. Lamp flash code: 33

1.18 DTC B2292 Error value 30: Driver safety belt pretensioner open circuit. Lamp flash code: 33

1.19 DTC B2292 Error value 29: Driver safety belt pretensioner short to battery. Lamp flash code: 33

1.20 DTC B2292 Error value 28: Driver safety belt pretensioner short to ground. Lamp flash code: 33

1.21 DTC B2292 Error value 27: Passenger safety belt pretensioner circuit low resistance. Lamp flash code: 34

1.22 DTC B2292 Error value 26: Passenger safety belt pretensioner open circuit. Lamp flash code: 34

1.23 DTC B2292 Error value 25: Passenger safety belt pretensioner short to battery. Lamp flash code: 34

1.24 DTC B2292 Error value 24: Passenger safety belt pretensioner short to ground. Lamp flash code: 34

1.25 DTC B2293 Error value 31: Driver air bag first stage short to ground. Lamp flash code: 19

1.26 DTC B2293 Error value 30: Driver air bag first stage short to battery. Lamp flash code: 19

1.27 DTC B2293 Error value 29: Driver air bag first stage open circuit. Lamp flash code: 19

1.28 DTC B2293 Error value 28: Driver air bag first stage circuit low resistance. Lamp flash code: 19

1.29 DTC B2293 Error value 27: Passenger air bag first stage short to ground. Lamp flash code: 21

1.30 DTC B2293 Error value 26: Passenger air bag first stage short to battery. Lamp flash code: 21

1.31 DTC B2293 Error value 25: Passenger air bag first stage open circuit. Lamp flash code: 21

1.32 DTC B2293 Error value 24: Passenger air bag first stage circuit low resistance. Lamp flash code: 21

1.33 DTC B2293 Error value 23: Driver air bag second stage short to ground. Lamp flash code: 19

1.34 DTC B2293 Error value 22: Driver air bag second stage short to battery. Lamp flash code: 19

1.35 DTC B2293 Error value 21: Driver air bag second stage open circuit. Lamp flash code: 19

1.36 DTC B2293 Error value 20: Driver air bag second stage circuit low resistance. Lamp flash code: 19

1.37 DTC B2293 Error value 19: Passenger air bag second stage short to ground. Lamp flash code: 21

1.38 DTC B2293 Error value 18: Passenger air bag second stage short to battery. Lamp flash code: 21

1.39 DTC B2293 Error value 17: Passenger air bag second stage open circuit. Lamp flash code: 21

1.40 DTC B2293 Error value 16: Passenger air bag second stage circuit low resistance. Lamp flash code: 21

1.41 DTC B2294 Error value 31: Driver side air curtain circuit short to battery. Lamp flash code: 24

1.42 DTC B2294 Error value 30: Driver side air curtain circuit short to ground. Lamp flash code: 24

1.43 DTC B2294 Error value 29: Driver side air curtain circuit open circuit. Lamp flash code: 24

1.44 DTC B2294 Error value 28: Driver side air curtain circuit low resistance on squib. Lamp flash code: 24

1.45 DTC B2294 Error value 27: Passenger side air curtain circuit short to battery. Lamp flash code: 25

1.46 DTC B2294 Error value 26: Passenger side air curtain circuit short to ground. Lamp flash code: 25

1.47 DTC B2294 Error value 25: Passenger side air curtain circuit open circuit. Lamp flash code: 25

1.48 DTC B2294 Error value 24: Passenger side air curtain circuit low resistance on squib. Lamp flash code: 25

1.49 DTC B2295 Error value 31: Driver side air bag circuit short to battery. Lamp flash code: 22

1.50 DTC B2295 Error value 30: Driver side air bag circuit short to ground. Lamp flash code: 22

1.51 DTC B2295 Error value 29: Driver side air bag circuit open circuit. Lamp flash code: 22

1.52 DTC B2295 Error value 28: Driver side air bag circuit low resistance on squib. Lamp flash code: 22

1.53 DTC B2295 Error value 27: Passenger side air bag circuit short to battery. Lamp flash code: 23

1.54 DTC B2295 Error value 26: Passenger side air bag circuit short to ground. Lamp flash code: 23

1.55 DTC B2295 Error value 25: Passenger side air bag circuit open circuit. Lamp flash code: 23

1.56 DTC B2295 Error value 24: Passenger side air bag circuit low resistance on squib. Lamp flash code: 23

1.57 DTC B2296 Error value 31: Driver side impact sensor communications fault. Lamp flash code: 43

1.58 DTC B2296 Error value 30: Driver side impact sensor internal fault. Lamp flash code: 43

1.59 DTC B2296 Error value 29: Passenger side impact sensor communications fault. Lamp flash code: 44

1.60 DTC B2296 Error value 28: Passenger side impact sensor internal fault. Lamp flash code: 44

- 1.61 DTC B2296 Error value 19: Crash sensor communications fault. Lamp flash code: 42
- 1.62 DTC B2296 Error value 18: Crash sensor internal fault. Lamp flash code: 42
- 1.63 DTC B2434: Driver safety belt buckle switch short circuit to ground. Lamp flash code: 51
- 1.64 DTC B2435: Driver safety belt buckle switch resistance out of range. Lamp flash code: 51
- 1.65 DTC B2438: Passenger safety belt buckle switch short circuit to ground. Lamp flash code: 52
- 1.66 DTC B2439: Passenger safety belt buckle switch resistance out of range. Lamp flash code: 52
- 1.67 DTC B2477: Air bag control module configuration failure. Lamp flash code: 54
- 1.68 DTC B2691: Driver safety belt buckle switch open circuit or short to battery. Lamp flash code: 51
- 1.69 DTC B2692: Passenger safety belt buckle switch open circuit short to battery. Lamp flash code: 52
- 1.70 DTC C1414: Incorrect Module Design Level. Lamp flash code: 15
- 1.71 DTC C1947: Seat position sensor short circuit to ground or battery. Lamp flash code: 49
- 1.72 DTC C1948: Seat position sensor resistance out of range. Lamp flash code: 49
- 1.73 DTC C1981: Seat position sensor open circuit. Lamp flash code: 49
- 1.74 Air bag control module disconnected or inoperative. Lamp flash code: continuous