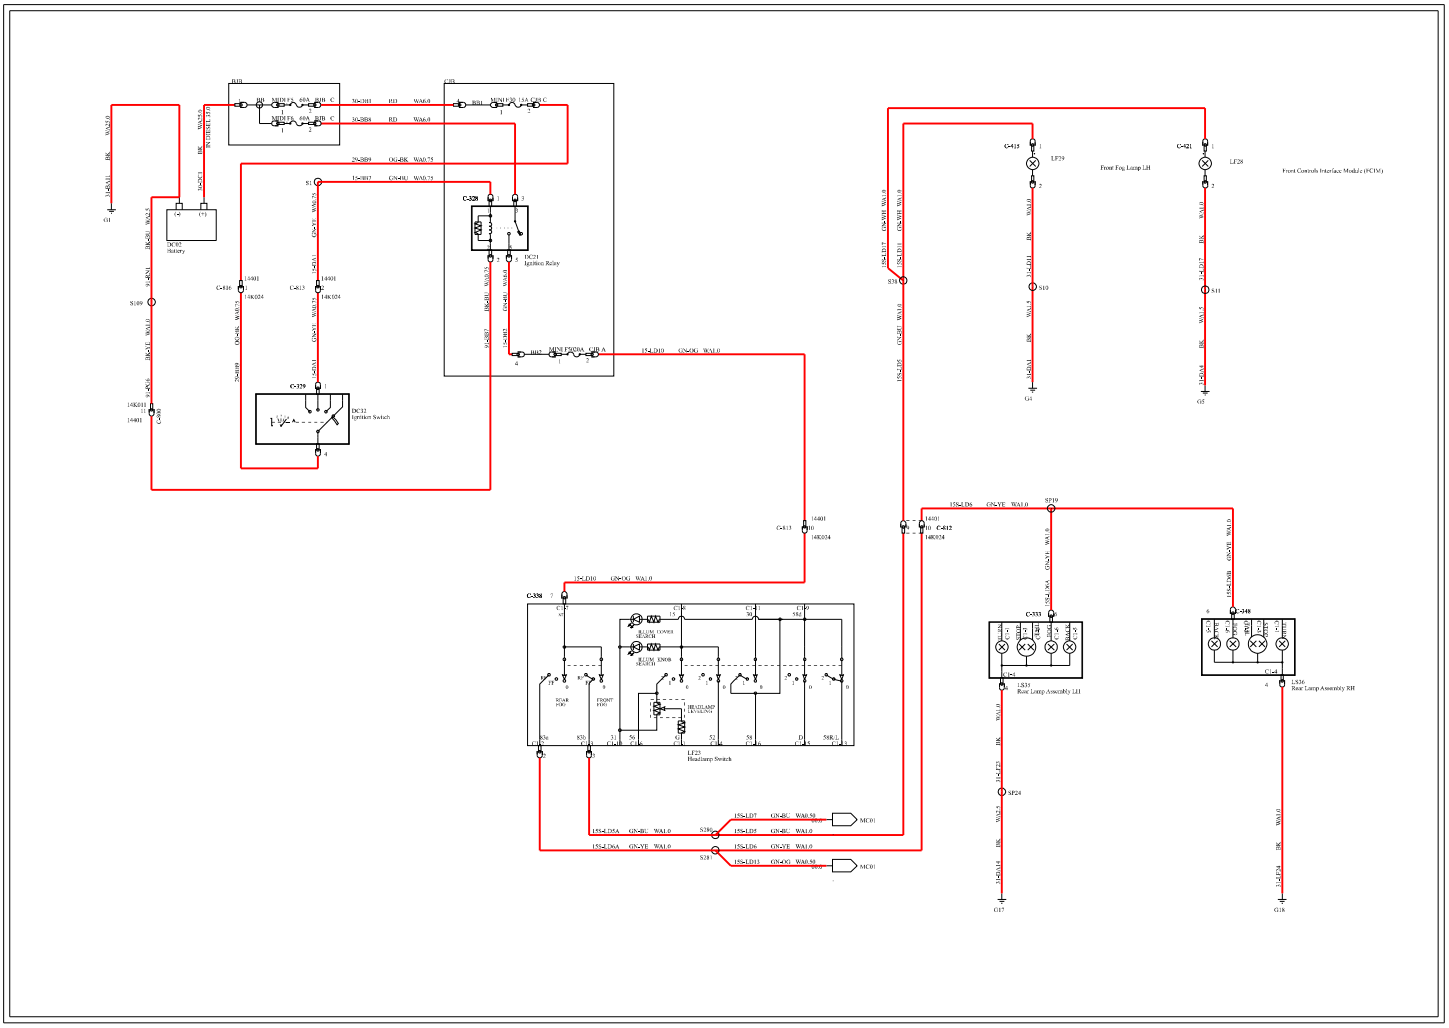
DC87
Battery
DC21
Ignition Relay
DC32
Ignition Switch
Front Fog Lamp LH
Front Controls Interface Module (FCIM)
LF23
Headlamp Switch
LS31
Rear Lamp Assembly LH
LS36
Rear Lamp Assembly RH