

First remove the Gearstick Surround Unscrew the Torx screw in the cup holder.

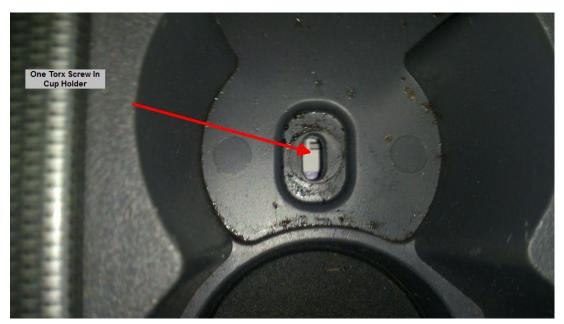


Pull up the trim from the rear to disengage the clips.

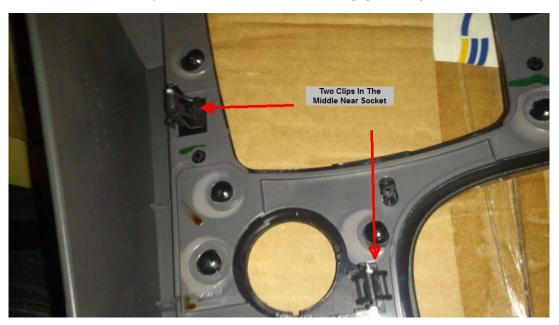



Push in the plastic lugs with small screwdrivers or plastic tools and hook something like coat hanger wire under the cutouts to draw the socket out from the surround (or a bit of string under the rim)

The lugs are fragile.

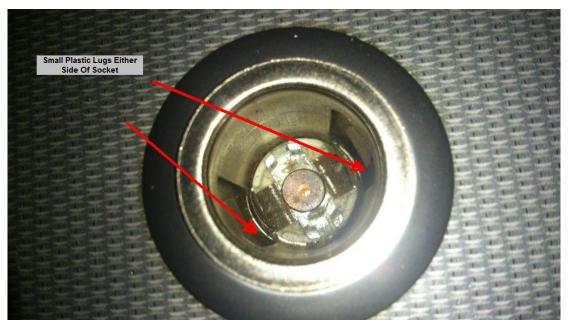



Unplug the connector from wire (Not shown)



A better view of the plastic lugs on the surround The socket needs to be removed before this surround will come out.

